
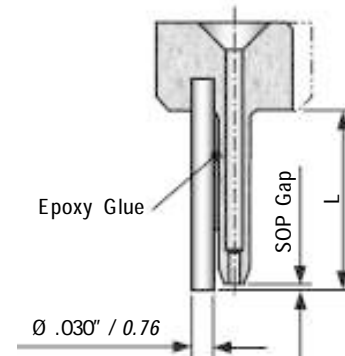
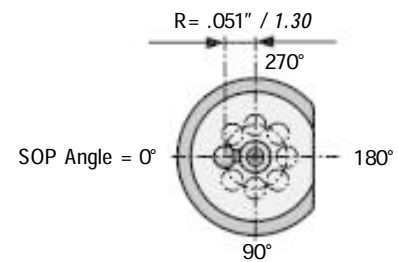


CDN : COMMON DISPENSING NOZZLE

In most programmable dispensing pumps, typical nozzle designs have been optimized to dispense consistent pattern and volume. Most of these standard nozzles have a distinct chamfered feature that reduces surface tension between the needle and material at the point of separation, therefore less probable to tailing or bridging. Stand-off pin (SOP**) option is available to control the allowable distance between the needle tip and substrate.

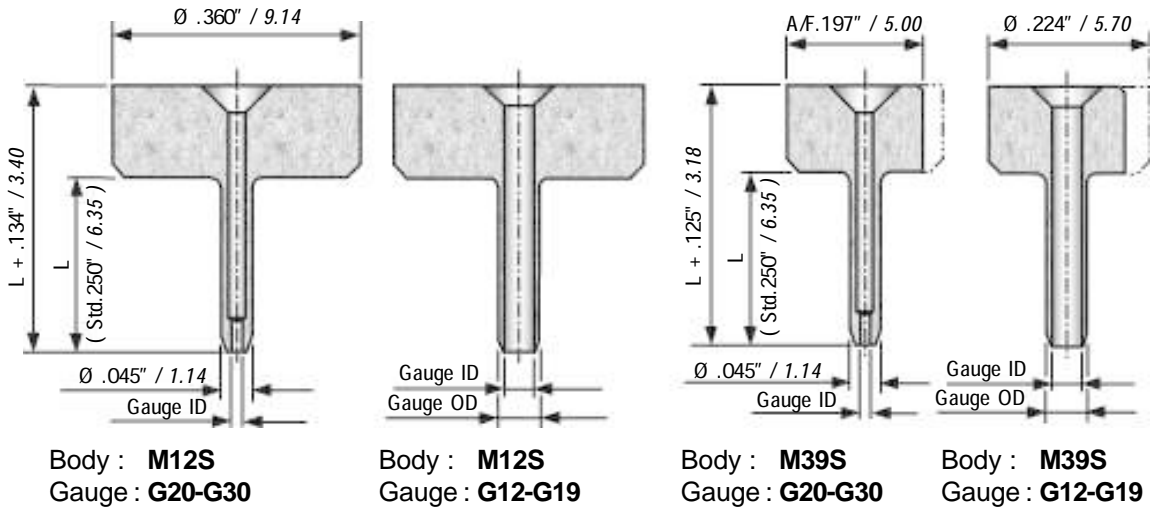

Body : **M39S**
Option : **SOP****

How To Order

	Tool Style	Body	Needle Length L	Mat'l	Needle Gauge*
	(SOP	Angle	Gap)		
EXAMPLE :	CDN	M12S	.250"	SS	G23
	CDN	M39S	.250"	SS	G17
	CDN	M39S	.250"	SS	G21
	SOP**	0 DG	.002"		

Note : * For Gauge Size information and selection see page 31
** Not applicable for gauge sizes 12-16